


AXLE 9



AXLE 10

AXLE 12


AXLE 11

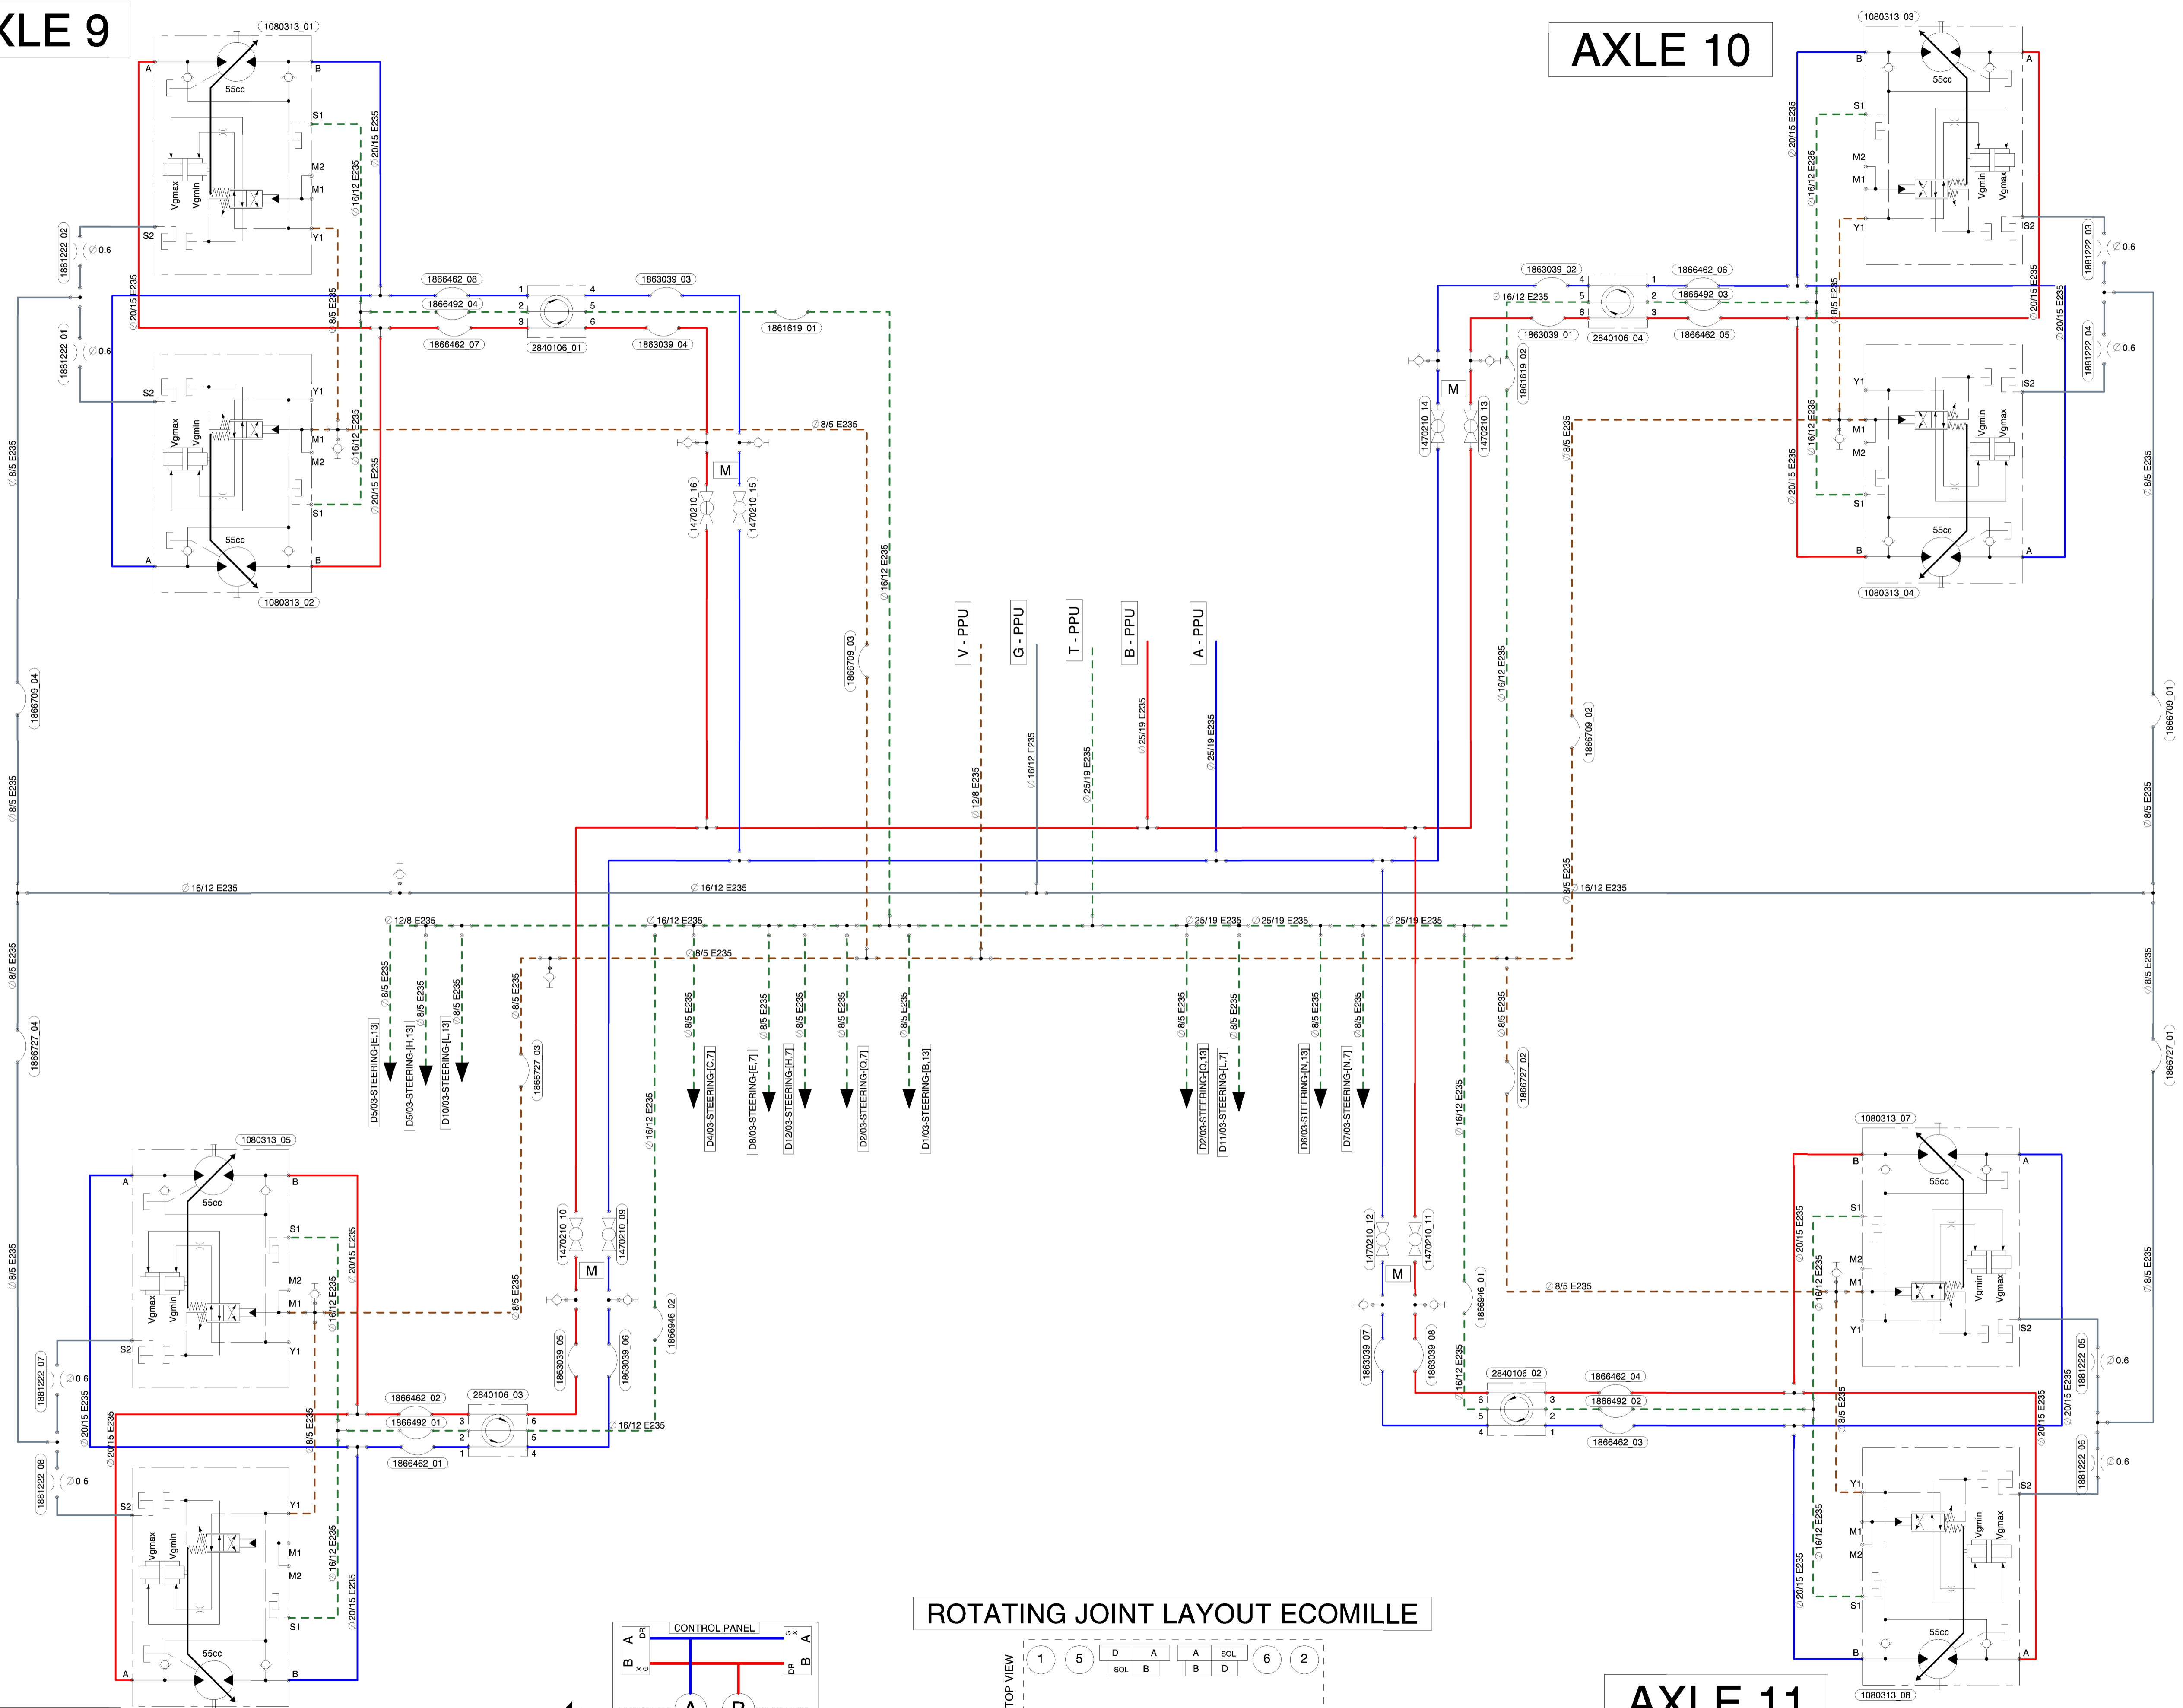


ROTATING JOINT LAYOUT ECOMILLE

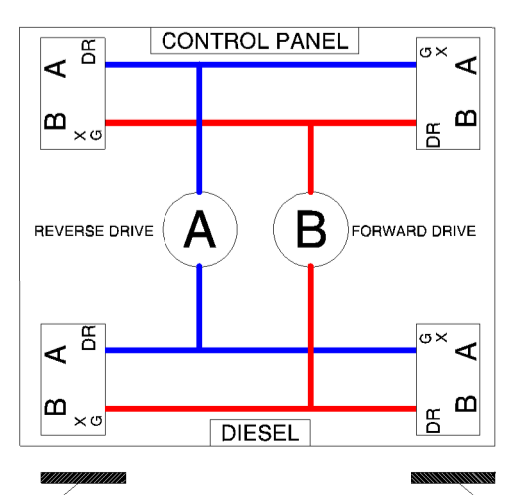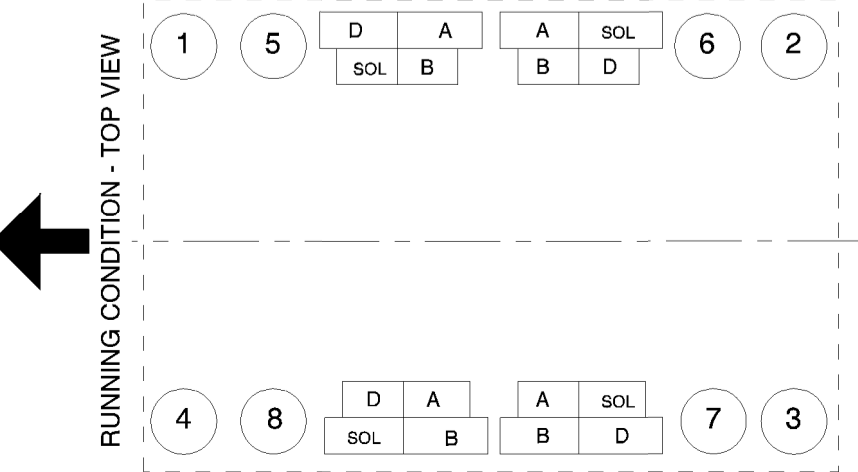


NAME	DATE
DRAWN BY: Mattalia	12/05/19
CHECKED BY: Fico	12/05/19
ALL RIGHTS RESERVED	

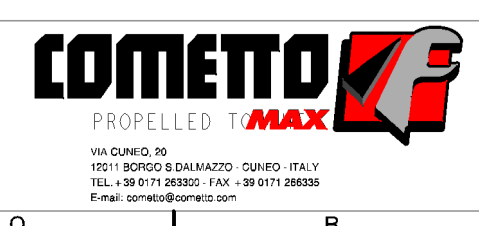



IMP.FLUID. MODULO ECO1000 6/4	
HYDRAULIC SYSTEM - 01-DRIVE	
SIZE: A1	DRAWING: 3582884 Rev C

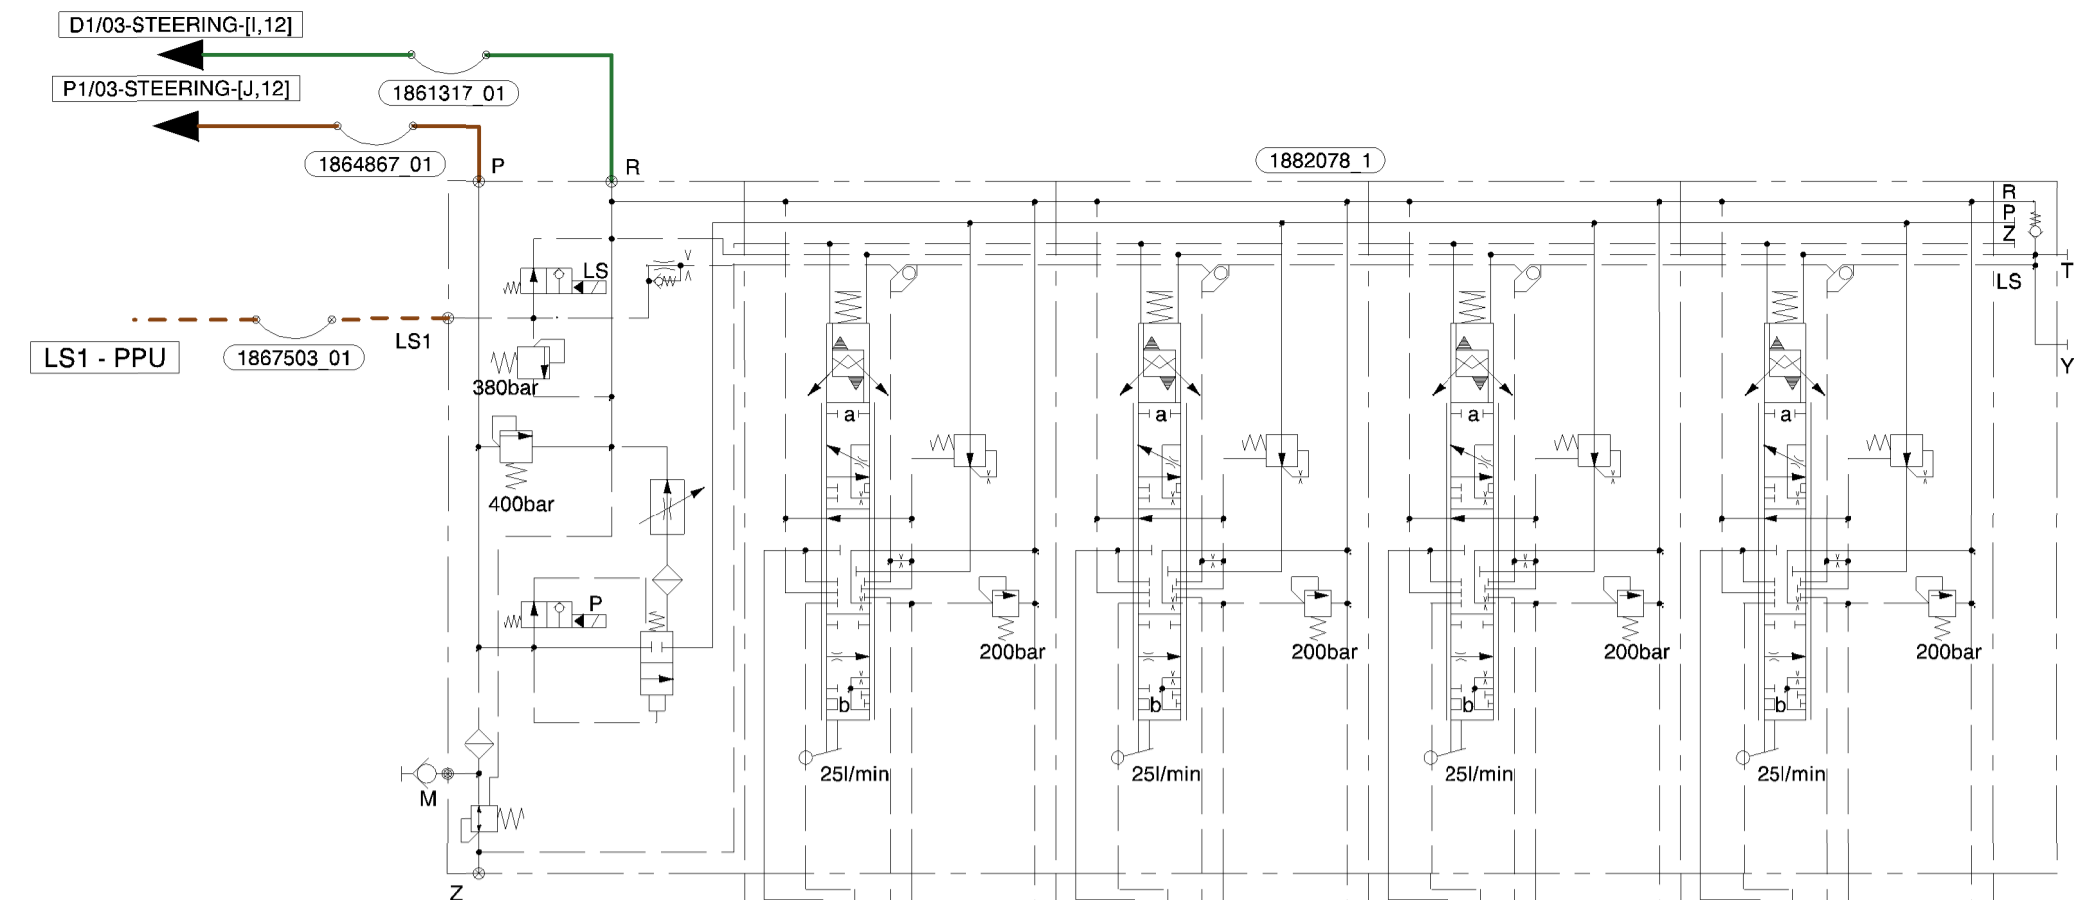


ECO1000-6/4-STABILITY LAYOUT - 4 POINTS

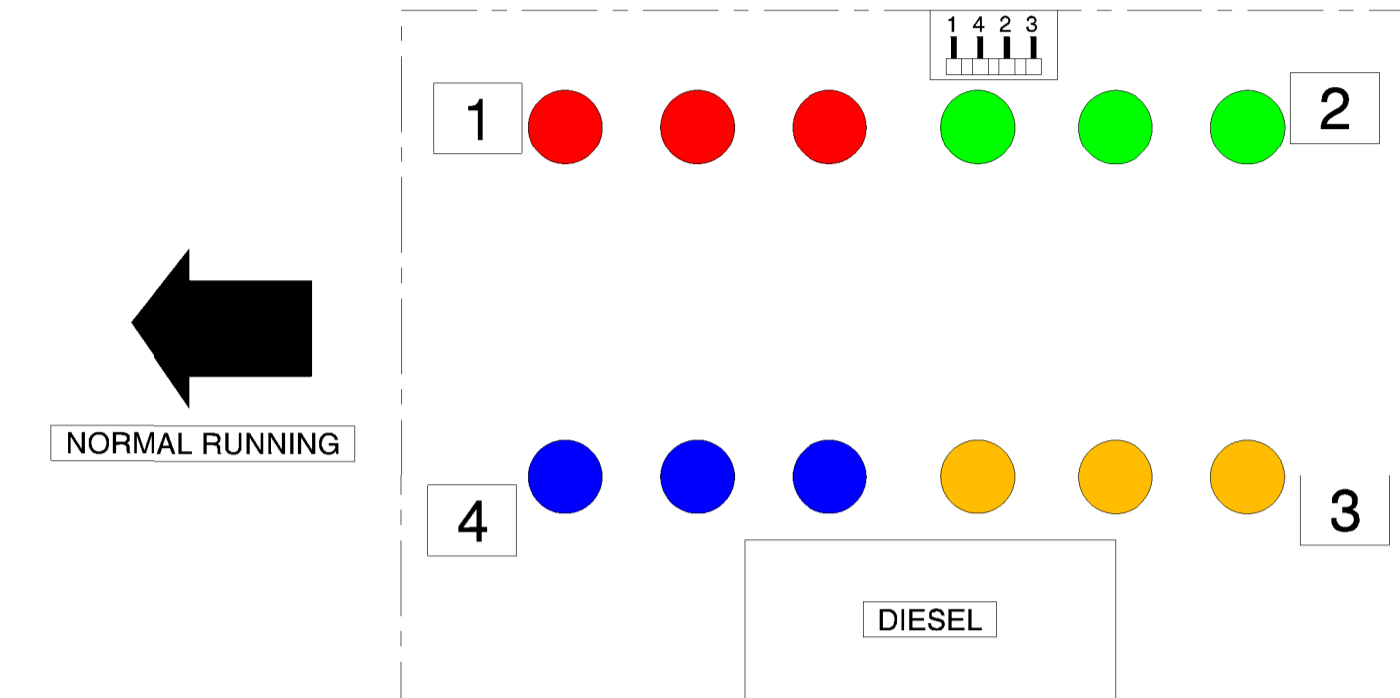

ECO1000-6/4-STABILITY LAYOUT - 3 POINTS

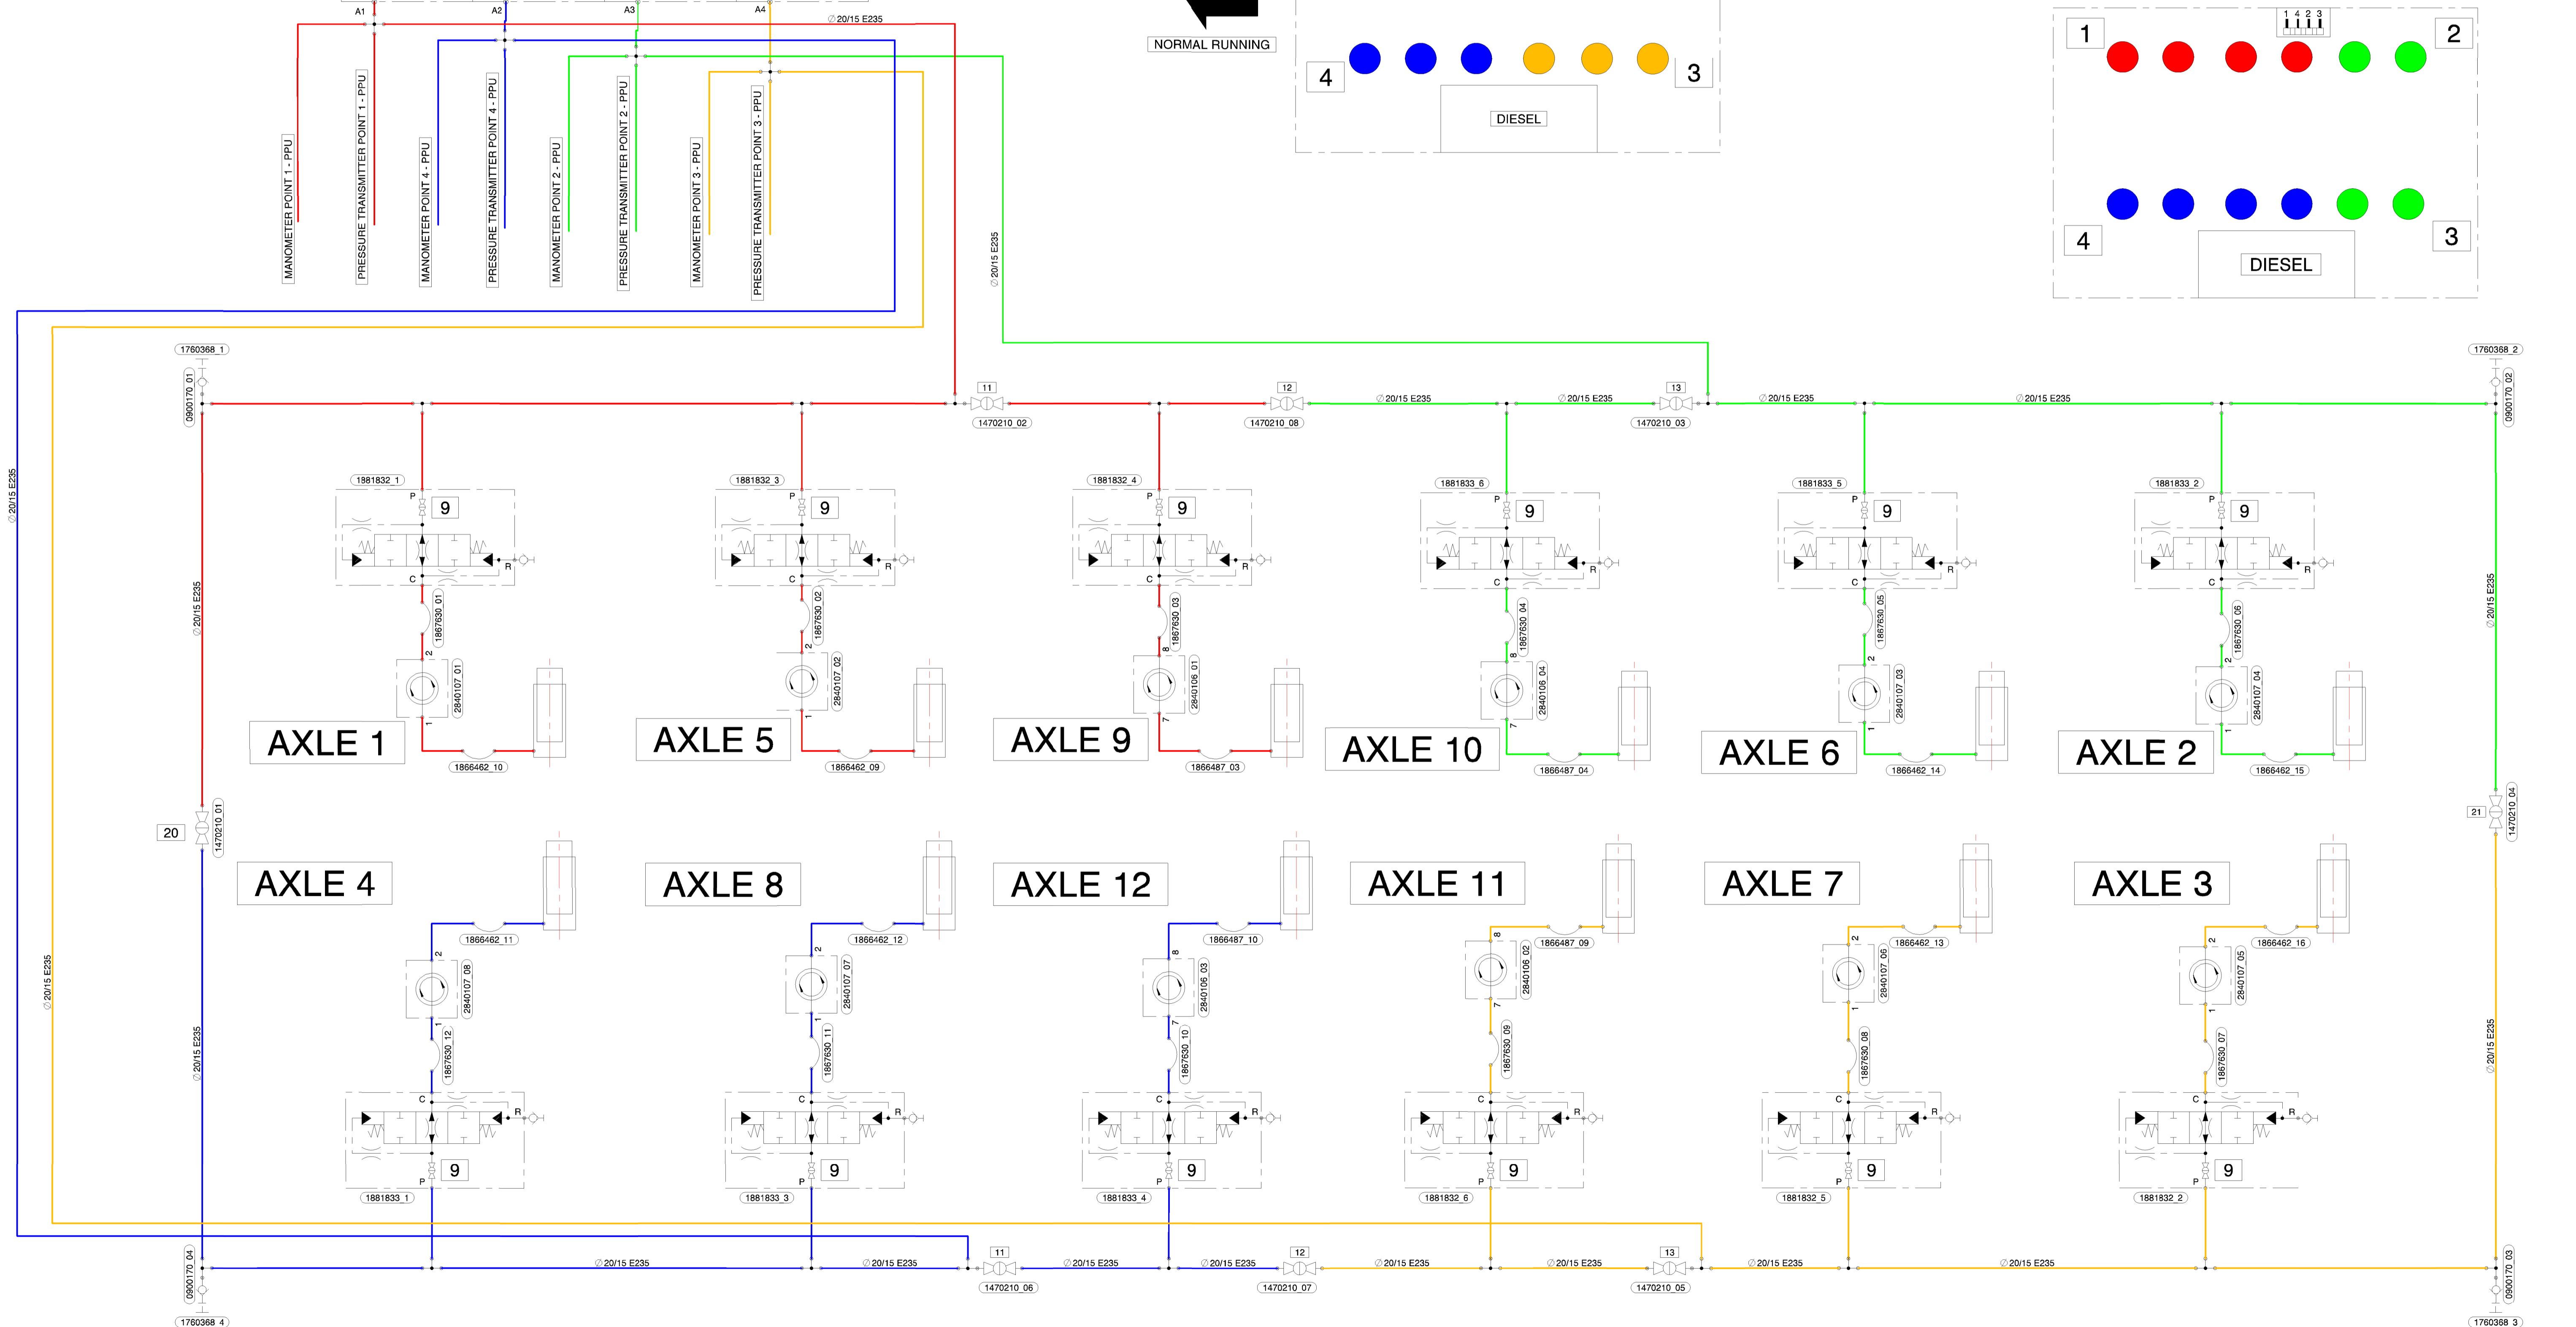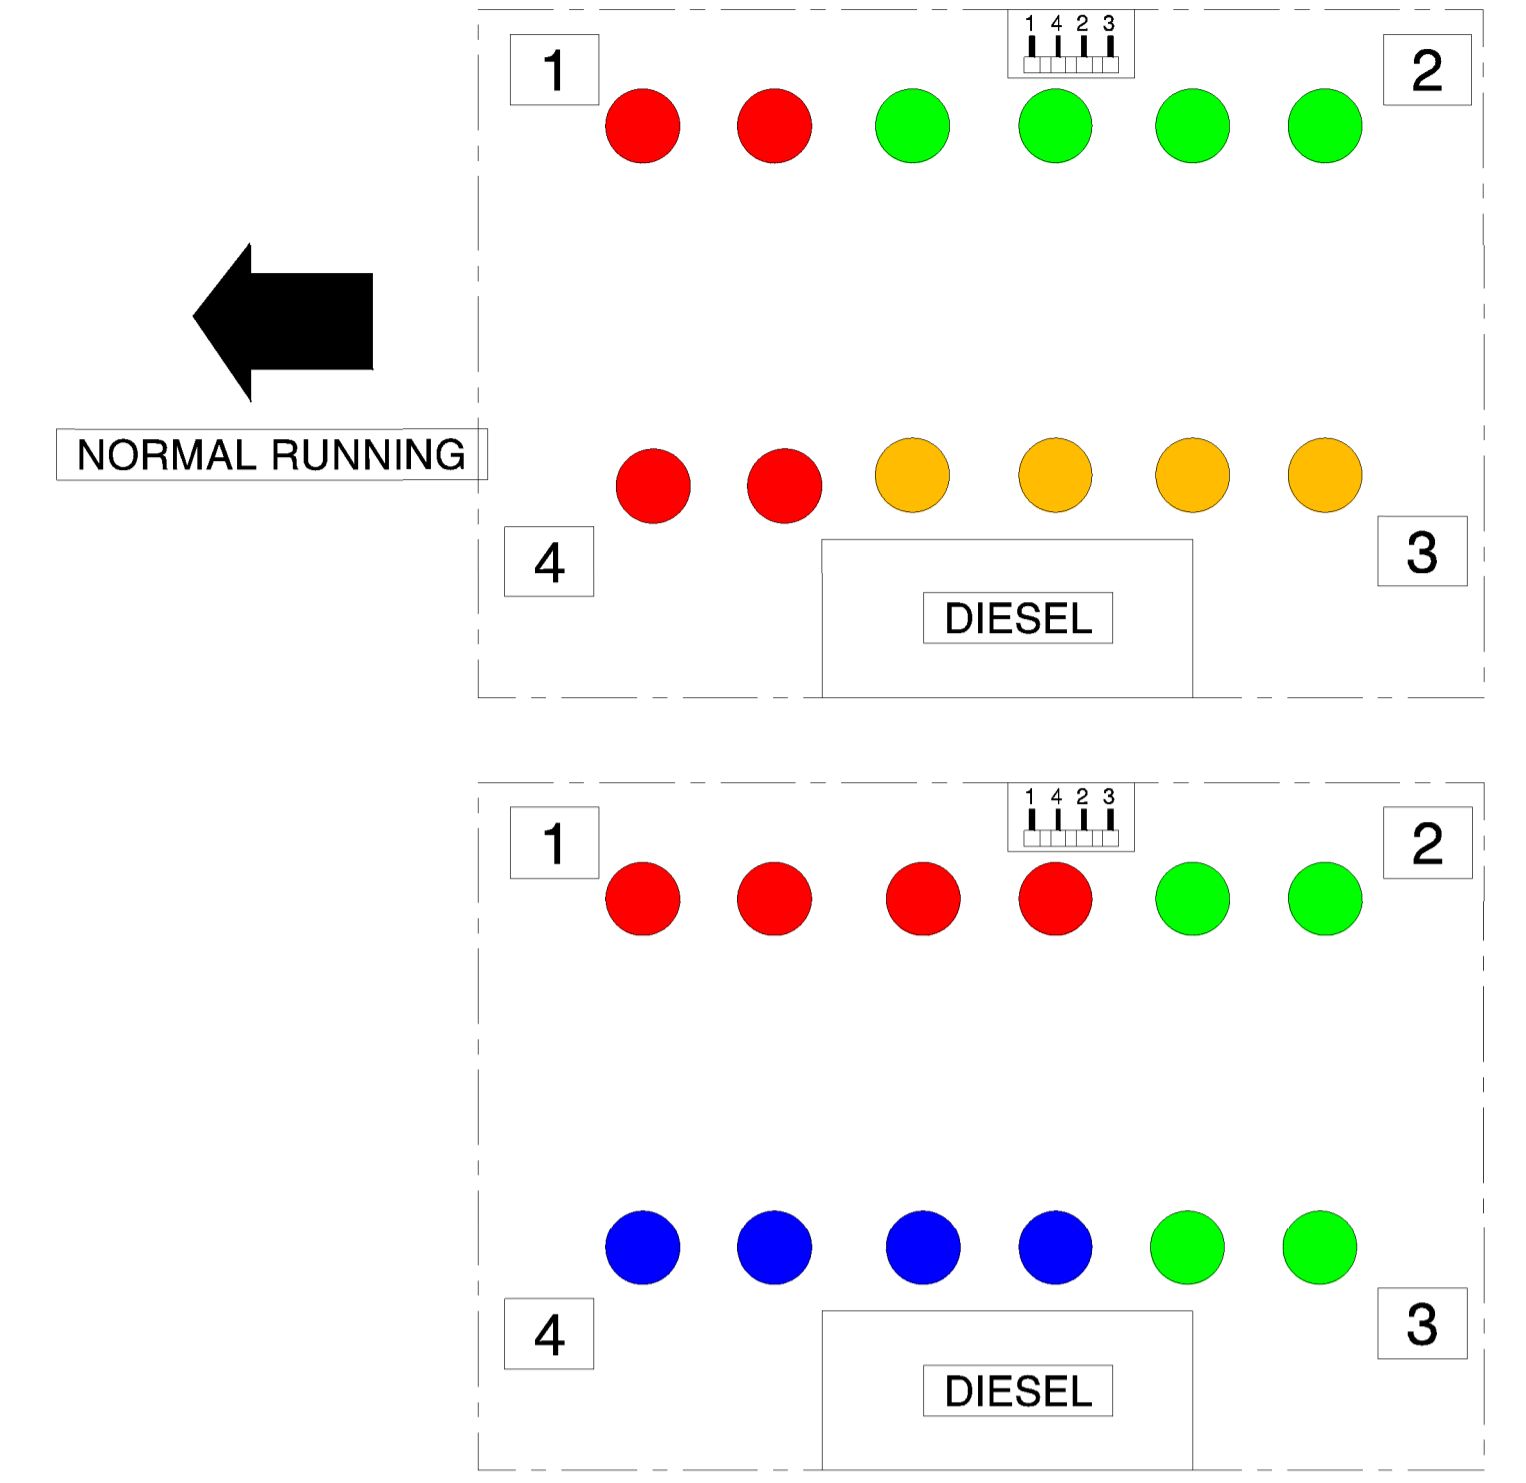

AXLE 1 AXLE 5 AXLE 9 AXLE 10 AXLE 6 AXLE 2

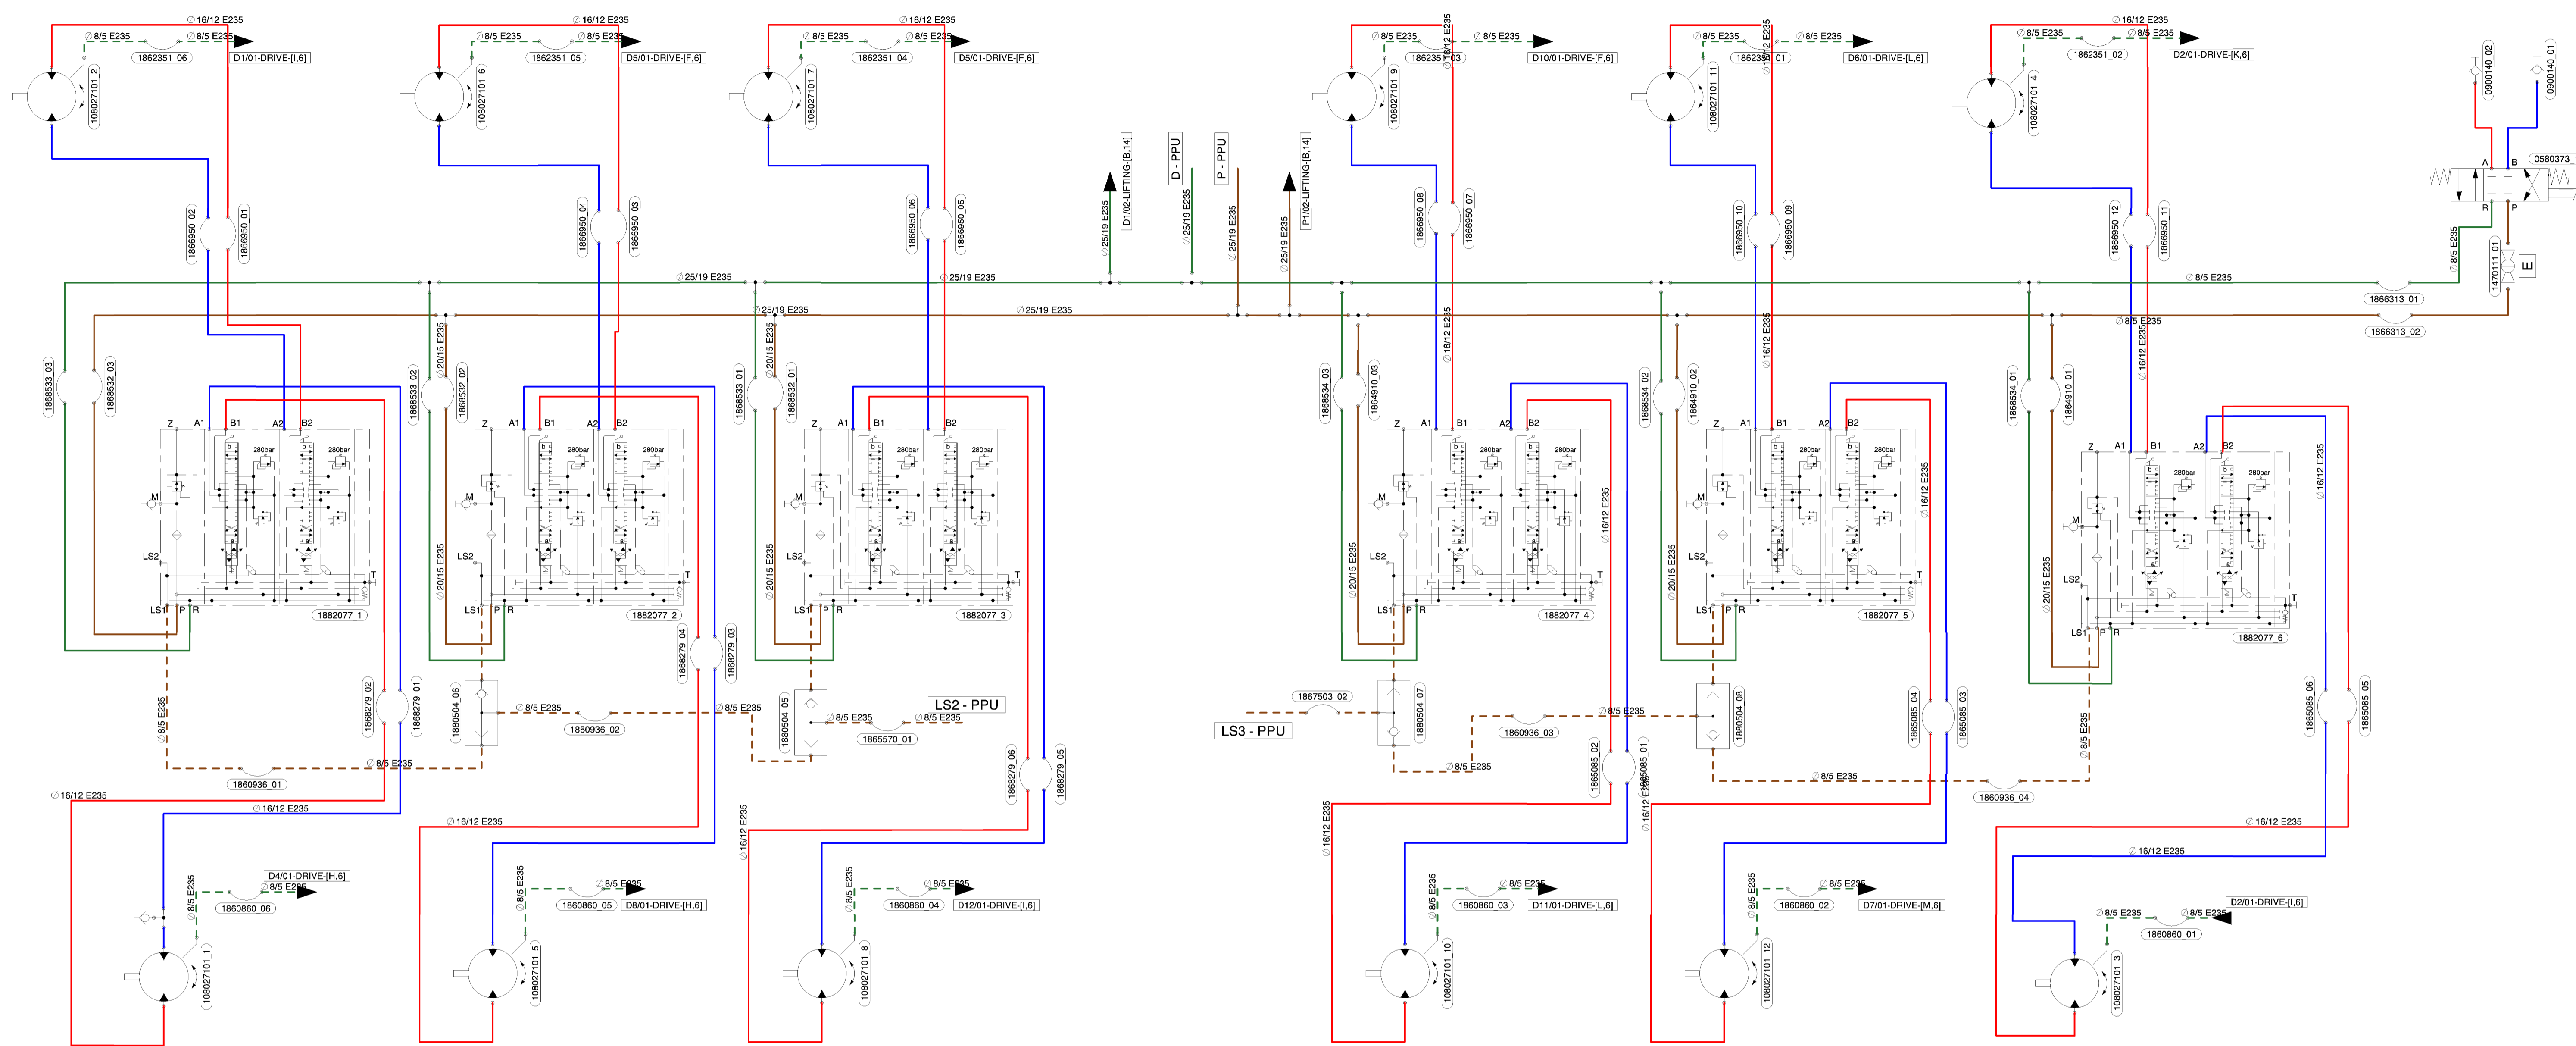

AXLE 4 AXLE 8 AXLE 12 AXLE 11 AXLE 7 AXLE 3

COLLEGAMENTI STERZATURA
 - ROTAZIONE ANTIORARIA - DA ATTACCO B SU DISTRIBUTORE AD ATTACCO INTERNO SU MOTORE DI STERZATURA
 - ROTAZIONE ORARIA - DA ATTACCO A SU DISTRIBUTORE AD ATTACCO ESTERNO SU MOTORE DI STERZATURA

STEERING CONNECTIONS
 - COUNTERCLOCKWISE ROTATION - FROM COUPLING B ON DISTRIBUTOR TO INTERNAL COUPLING ON STEERING MOTOR
 - CLOCKWISE ROTATION - FROM COUPLING TO ON DISTRIBUTOR TO EXTERNAL COUPLING TO STEERING MOTOR

NAME	DATE		IMP.FLUID. MODULO ECO1000 6/4 HYDRAULIC SYSTEM - 03-STEERING
DRAWN BY	12/05/19		
CHECKED BY	12/05/19		
ALL RIGHTS RESERVED			


SIZE	DRAWING	3582884	Rev	C
A1				

AXLE 5


AXLE 6

AXLE 8

AXLE 7

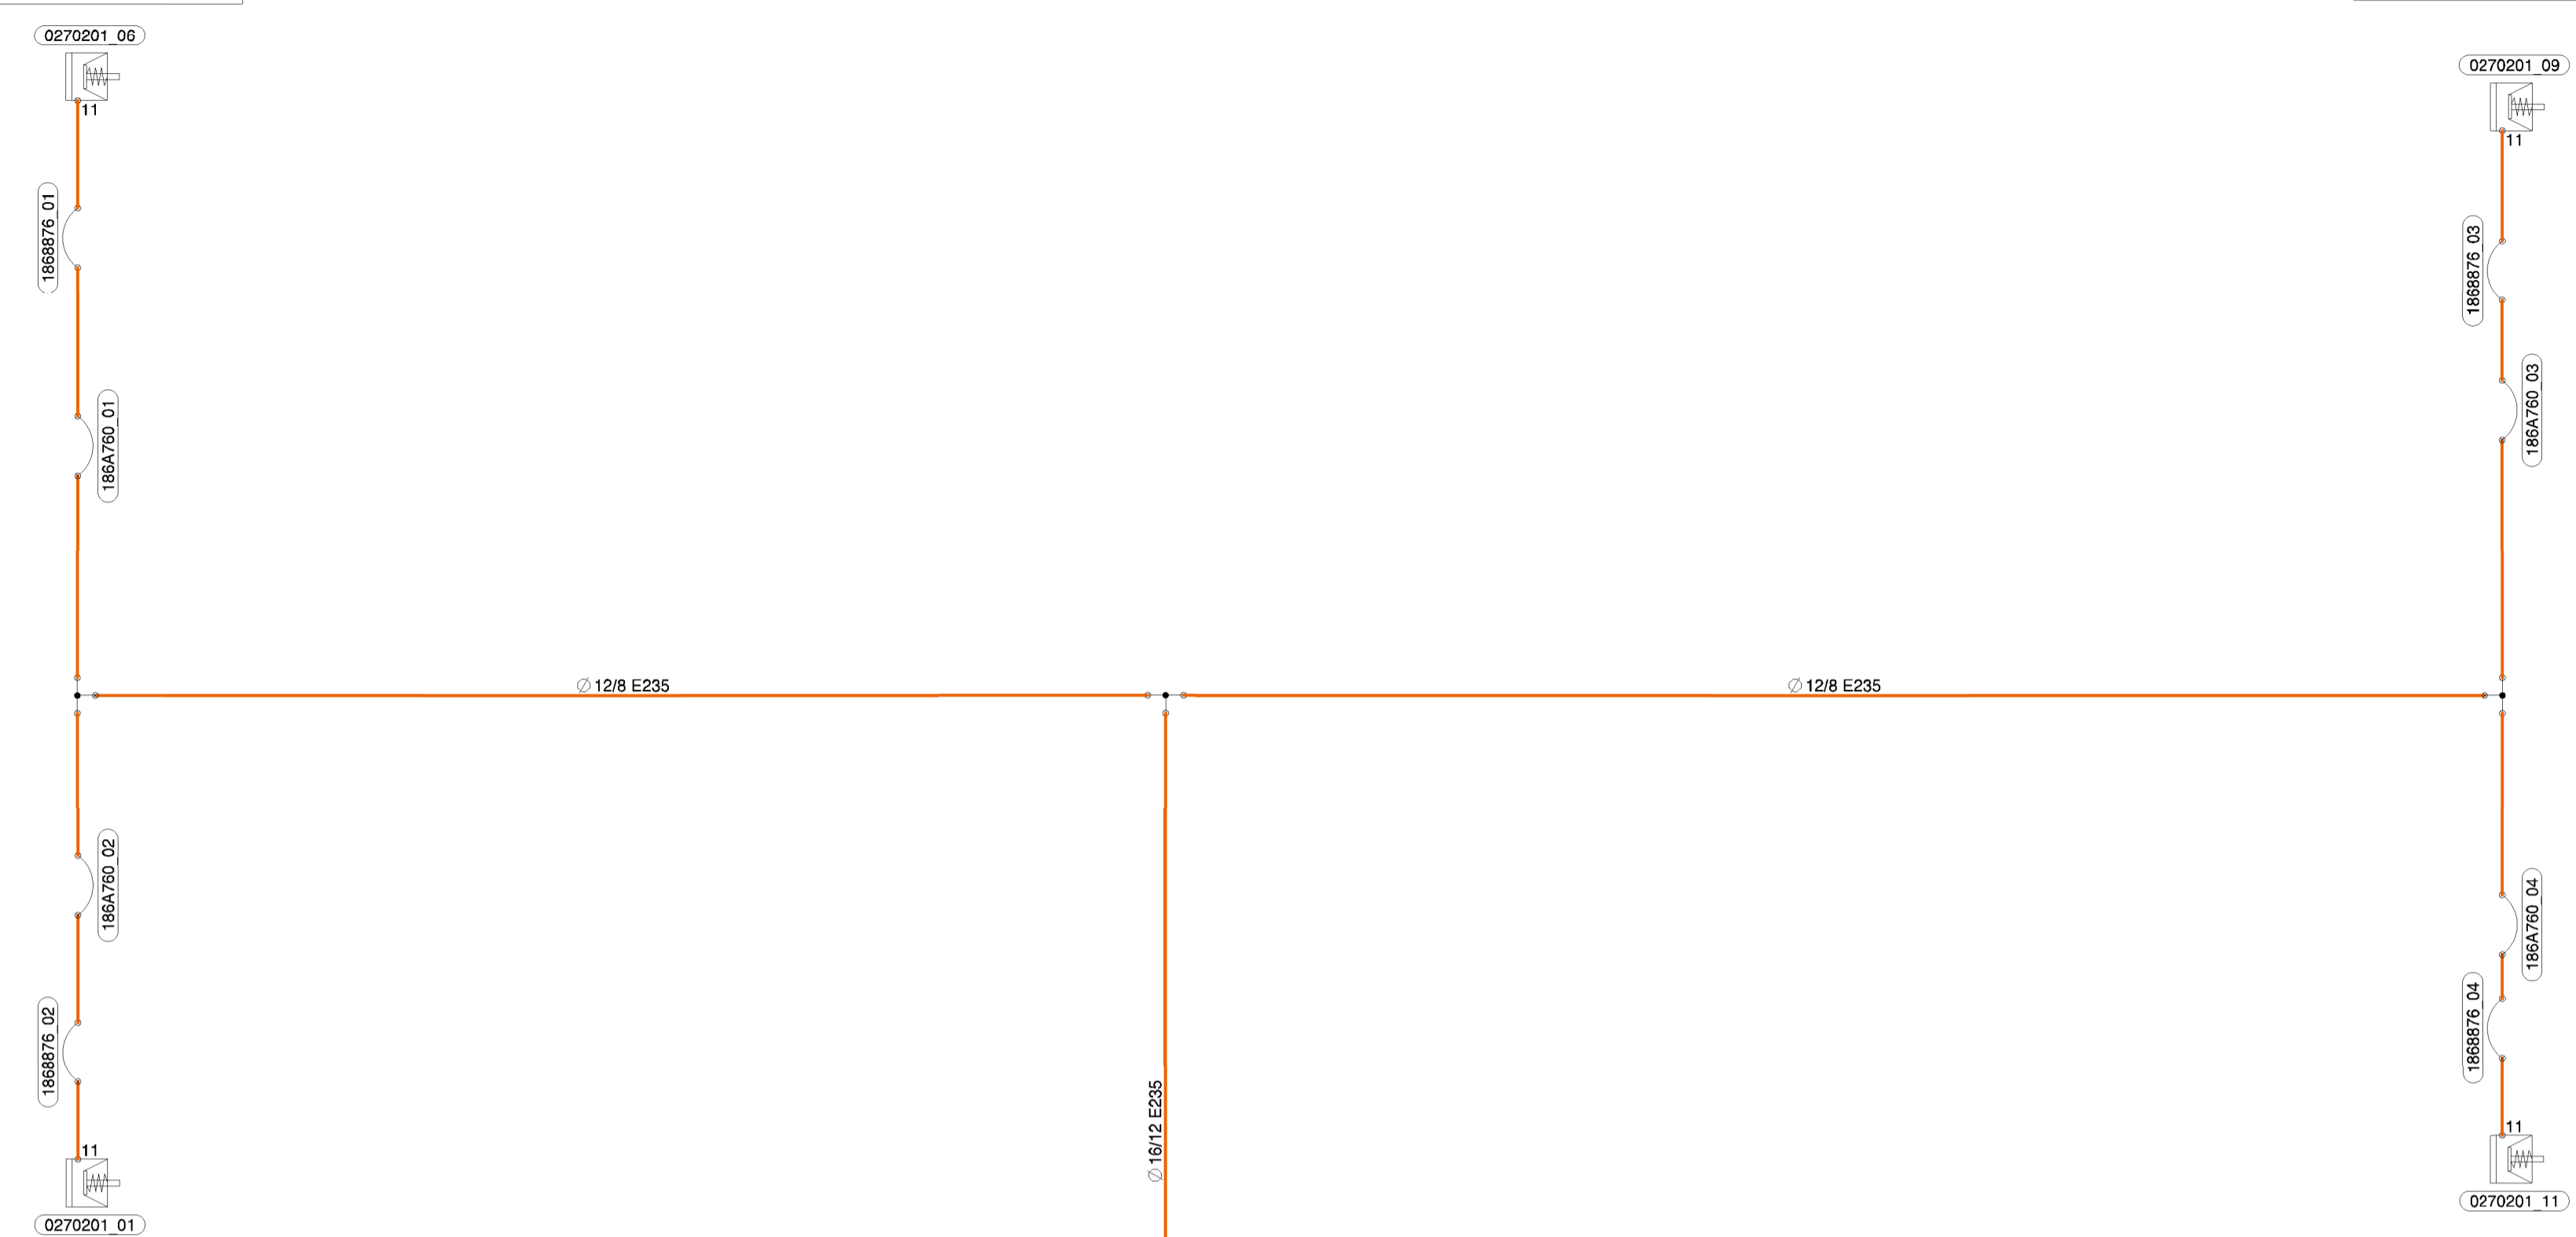

	NAME	DATE
DRAWN BY	Mattalia	12/05/19
CHECKED BY	Fiori	12/05/19
ALL RIGHTS RESERVED		

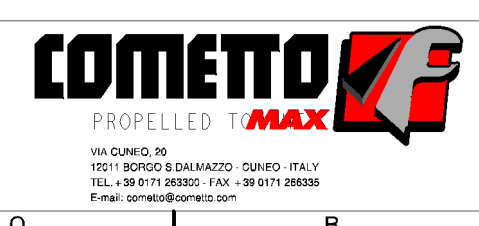

IMP.FLUID. MODULO ECO1000 6/4		HYDRAULIC SYSTEM - 04-BRAKE	
SIZE	DRAWING	3582884	Rev C
A1			

BILL OF MATERIAL DATATABLE

SYSTEM COMPONENT POSITION AND FUNCTION

COMETTO REF.	MANUFACTURER NAME	MANUFACTURER REFERENCE	DESCRIPTION	TOTAL
186A760	UNSET	UNSET	FLEXIBLE HOSE	4
0270201	HOCHDRUCK	FS40-160	BRAKE CHAMBER	4
0580373	HAWE	SG0G-A	DIRECTIONAL VALVE	1
0900140	FASTER	NV14GAS F	QUICK COUPLING FEMALE	2
0900170	STAUFF	RH16-3-MS2030	QUICK COUPLING MALE	4
1080313	BREVINI	CWD2150/42.4 + SH7VR55	HYDRAULIC MOTOR + DRIVE GEAR	8
1470111	STAUFF	BBV2G040001M PN500 1128	2 WAY BALL VALVE	1
1470210	STAUFF	BKH-DN16-20S DN16-S	2 WAY BALL VALVE	16
1760368	COMETTO	1760368	PLUG	4
1860860	UNSET	R2K 1/4"X600 ECD8-EC90 GRADI 8	FLEXIBLE HOSE	6
1860936	UNSET	R2K 1/4"X1700 ECD8-EC90 GRADI 8	FLEXIBLE HOSE	4
1861317	UNSET	R2K 1"X1100 ECD25-EC90 GRADI 25	FLEXIBLE HOSE	1
1861619	UNSET	R2K 1/2"X1900 ECD16-EC90 GRADI 16	FLEXIBLE HOSE	2
1862351	UNSET	R2K 1/4"X1250 ECD8-EC90 GRADI 8	FLEXIBLE HOSE	6
1863039	UNSET	4SP 5/8"X1400 ECD20-ECD20	FLEXIBLE HOSE	8
1864867	UNSET	4SH 1"X1100 ECD25-EC90 GRADI 25	FLEXIBLE HOSE	1
1864910	UNSET	4SP 5/8"X1100 ECD20-EC45 GRADI 20	FLEXIBLE HOSE	3
1865085	UNSET	4SP 1/2"X1800 ECD16-EC90 GRADI 16 - SUPERTUFF	FLEXIBLE HOSE	6
1865570	UNSET	R2K 1/4"X1800 ECD8-EC90 GRADI 8	FLEXIBLE HOSE	1
1866313	UNSET	R2K 1/4"X2100 ECD8-EC90 GRADI 8	FLEXIBLE HOSE	2
1866462	UNSET	4SP 5/8"X560 ECD20-ECD20-SUPERTUFF	FLEXIBLE HOSE	16
1866487	UNSET	4SP 5/8"X560 ECD20-EC90 GRADI 20-SUPERTUFF	FLEXIBLE HOSE	4
1866492	UNSET	R2K 1/2"X560 ECD16-ECD16 - SUPERTUFF	FLEXIBLE HOSE	4
1866709	UNSET	R2K 1/4"X2000 ECD8-ECD8 - SUPERTUFF	FLEXIBLE HOSE	4
1866727	UNSET	R2K 1/4"X3000 ECD8-ECD8 - SUPERTUFF	FLEXIBLE HOSE	4
1866946	UNSET	R2K 1/2"X1500 ECD16-EC90 GRADI 16 - SUPERTUFF	FLEXIBLE HOSE	2
1866950	UNSET	4SP 1/2"X1200 ECD16-EC45 GRADI 16 - SUPERTUFF	FLEXIBLE HOSE	12
1867503	UNSET	R2K 1/4"X4800 ECD8-EC90 GRADI 8	FLEXIBLE HOSE	2
1867630	UNSET	4SP 5/8"X1400 ECD20-EC45 GRADI 20 - SUPERTUFF	FLEXIBLE HOSE	12
1868279	UNSET	4SP 1/2"X2000 ECD16-EC45 GRADI 16 - SUPERTUFF	FLEXIBLE HOSE	6
1868532	UNSET	4SP 5/8"X850 ECD20-EC90 GRADI 20 - supertuff	FLEXIBLE HOSE	3
1868533	UNSET	R2K 5/8"X850 ECD20-EC90 GRADI 20 - supertuff	FLEXIBLE HOSE	3
1868534	UNSET	R2K 5/8"X1100 ECD20-EC45 GRADI 20 - supertuff	FLEXIBLE HOSE	3
1868876	UNSET	UNSET	FLEXIBLE HOSE	4
1880504	HAWE	WV8-S	SHUTTLE VALVE	4
1881222	REXROTH	HU00156490	RESTRICTOR VALVE	8
1881832	COMETTO	1881832	HOSE BREAK SAFETY VALVE	6
1881833	COMETTO	1881833	HOSE BREAK SAFETY VALVE	6
1882077	HAWE	6963 1016-74.HW	ELECTRO PROPORTIONAL DIRECTIONAL VALVE	6
1882078	HAWE	6963 1016-83.HW	ELECTRO PROPORTIONAL DIRECTIONAL VALVE	1
2840106	HYDROVER	2840106	ROTATING JOINT	4
2840107	HYDROVER	2840107	ROTATING JOINT	8
108027101	BREVINI	RSKW160A2M09SE320XXX000XXX	FIXED DISPLACEMENT HYDRAULIC MOTOR	12

LABEL NAME	POSITION	COMPONENT FUNCTION	ELECTRIC LABEL	LABEL NAME	POSITION	COMPONENT FUNCTION	ELECTRIC LABEL
186A760 01	/04-BRAKE-[E,11]	UNSET	<absent>	1866950 12	/03-STEERING-[P,12]	UNSET	<absent>
186A760 02	/04-BRAKE-[E,9]	UNSET	<absent>	1867503 01	/02-LIFTING-[B,13]	UNSET	<absent>
186A760 03	/04-BRAKE-[O,11]	UNSET	<absent>	1867503 02	/03-STEERING-[J,8]	UNSET	<absent>
186A760 04	/04-BRAKE-[O,9]	UNSET	<absent>	1867630 01	/02-LIFTING-[D,6]	UNSET	<absent>
0270201 01	/04-BRAKE-[E,8]	UNSET	<absent>	1867630 02	/02-LIFTING-[G,6]	UNSET	<absent>
0270201 06	/04-BRAKE-[E,13]	UNSET	<absent>	1867630 03	/02-LIFTING-[J,6]	UNSET	<absent>
0270201 09	/04-BRAKE-[O,13]	UNSET	<absent>	1867630 04	/02-LIFTING-[L,6]	UNSET	<absent>
0270201 11	/04-BRAKE-[O,8]	UNSET	<absent>	1867630 05	/02-LIFTING-[O,6]	UNSET	<absent>
0580373 1	/03-STEERING-[S,12]	coupling cylinder distributor	<absent>	1867630 06	/02-LIFTING-[R,6]	UNSET	<absent>
0900140 01	/03-STEERING-[S,13]	UNSET	<absent>	1867630 07	/02-LIFTING-[O,3]	UNSET	<absent>
0900140 02	/03-STEERING-[S,13]	UNSET	<absent>	1867630 08	/02-LIFTING-[O,3]	UNSET	<absent>
0900170 01	/02-LIFTING-[B,8]	UNSET	<absent>	1867630 09	/02-LIFTING-[L,3]	UNSET	<absent>
0900170 02	/02-LIFTING-[T,8]	UNSET	<absent>	1867630 10	/02-LIFTING-[J,3]	UNSET	<absent>
0900170 03	/02-LIFTING-[T,2]	UNSET	<absent>	1867630 11	/02-LIFTING-[G,3]	UNSET	<absent>
0900170 04	/02-LIFTING-[B,2]	UNSET	<absent>	1867630 12	/02-LIFTING-[D,3]	UNSET	<absent>
1080313 01	/01-DRIVE-[E,14]	UNSET	UNSET	1868279 01	/03-STEERING-[D,8]	UNSET	<absent>
1080313 02	/01-DRIVE-[E,10]	UNSET	UNSET	1868279 02	/03-STEERING-[C,8]	UNSET	<absent>
1080313 03	/01-DRIVE-[P,14]	UNSET	UNSET	1868279 03	/03-STEERING-[F,8]	UNSET	<absent>
1080313 04	/01-DRIVE-[P,10]	UNSET	UNSET	1868279 04	/03-STEERING-[F,9]	UNSET	<absent>
1080313 05	/01-DRIVE-[E,5]	UNSET	UNSET	1868279 05	/03-STEERING-[H,8]	UNSET	<absent>
1080313 06	/01-DRIVE-[E,2]	UNSET	UNSET	1868279 06	/03-STEERING-[H,8]	UNSET	<absent>
1080313 07	/01-DRIVE-[P,8]	UNSET	UNSET	1868532 01	/03-STEERING-[F,10]	UNSET	<absent>
1080313 08	/01-DRIVE-[P,2]	UNSET	UNSET	1868532 02	/03-STEERING-[D,10]	UNSET	<absent>
1470111 01	/03-STEERING-[S,11]	P ball valve	<absent>	1868532 03	/03-STEERING-[A,10]	UNSET	<absent>
1470210 01	/02-LIFTING-[B,5]	UNSET	<absent>	1868532 04	/03-STEERING-[A,10]	UNSET	<absent>
1470210 02	/02-LIFTING-[H,8]	UNSET	<absent>	1868534 01	/03-STEERING-[P,11]	UNSET	<absent>
1470210 03	/02-LIFTING-[M,8]	UNSET	<absent>	1868534 02	/03-STEERING-[M,11]	UNSET	<absent>
1470210 04	/02-LIFTING-[T,5]	UNSET	<absent>	1868534 03	/03-STEERING-[J,11]	UNSET	<absent>
1470210 05	/02-LIFTING-[M,2]	UNSET	<absent>	1868876 01	/04-BRAKE-[E,12]	UNSET	<absent>
1470210 06	/02-LIFTING-[H,2]	UNSET	<absent>	1868876 02	/04-BRAKE-[E,9]	UNSET	<absent>
1470210 07	/02-LIFTING-[K,2]	UNSET	<absent>	1868876 03	/04-BRAKE-[O,12]	UNSET	<absent>
1470210 08	/02-LIFTING-[J,8]	UNSET	<absent>	1868876 04	/04-BRAKE-[O,9]	UNSET	<absent>
1470210 09	/01-DRIVE-[G,5]	UNSET	<absent>	1868876 05	/03-STEERING-[G,8]	LS shuttle valve	<absent>
1470210 10	/01-DRIVE-[G,5]	UNSET	<absent>	1868876 06	/03-STEERING-[G,8]	LS shuttle valve	<absent>
1470210 11	/01-DRIVE-[M,5]	UNSET	<absent>	1880504 06	/03-STEERING-[D,8]	LS shuttle valve	<absent>
1470210 12	/01-DRIVE-[M,5]	UNSET	<absent>	1880504 07	/03-STEERING-[K,8]	LS shuttle valve	<absent>
1470210 13	/01-DRIVE-[H,11]	UNSET	<absent>	1880504 08	/03-STEERING-[M,8]	LS shuttle valve	<absent>
1470210 14	/01-DRIVE-[H,11]	UNSET	<absent>	1881222 01	/01-DRIVE-[C,11]	UNSET	<absent>
1470210 15	/01-DRIVE-[H,10]	UNSET	<absent>	1881222 02	/01-DRIVE-[C,12]	UNSET	<absent>
1470210 16	/01-DRIVE-[H,10]	UNSET	<absent>	1881222 03	/01-DRIVE-[R,12]	UNSET	<absent>
1760368 1	/02-LIFTING-[B,8]	UNSET	UNSET	1881222 04	/01-DRIVE-[R,11]	UNSET	<absent>
1760368 2	/02-LIFTING-[T,8]	UNSET	UNSET	1881222 05	/01-DRIVE-[R,4]	UNSET	<absent>
1760368 3	/02-LIFTING-[T,1]	UNSET	UNSET	1881222 06	/01-DRIVE-[R,3]	UNSET	<absent>
1760368 4	/02-LIFTING-[B,1]	UNSET	UNSET	1881222 07	/01-DRIVE-[C,4]	UNSET	<absent>
1860860 01	/03-STEERING-[P,7]	UNSET	<absent>	1881222 08	/01-DRIVE-[C,3]	UNSET	<absent>
1860860 02	/03-STEERING-[N,7]	UNSET	<absent>	1881832 1	/02-LIFTING-[D,7]	UNSET	<absent>
1860860 03	/03-STEERING-[K,7]	UNSET	<absent>	1881832 2	/02-LIFTING-[O,3]	UNSET	<absent>
1860860 04	/03-STEERING-[G,7]	UNSET	<absent>	1881832 3	/02-LIFTING-[G,7]	UNSET	<absent>
1860860 05	/03-STEERING-[E,7]	UNSET	<absent>	1881832 4	/02-LIFTING-[J,7]	UNSET	<absent>
1860860 06	/03-STEERING-[B,7]	UNSET	<absent>	1881832 5	/02-LIFTING-[O,3]	UNSET	<absent>
1860936 01	/03-STEERING-[B,8]	UNSET	<absent>	1881832 6	/02-LIFTING-[L,3]	UNSET	<absent>
1860936 02	/03-STEERING-[E,8]	UNSET	<absent>	1881833 1	/02-LIFTING-[D,3]	UNSET	<absent>
1860936 03	/03-STEERING-[L,8]	UNSET	<absent>	1881833 2	/02-LIFTING-[R,7]	UNSET	<absent>
1860936 04	/03-STEERING-[O,8]	UNSET	<absent>	1881833 3	/02-LIFTING-[G,3]	UNSET	<absent>
1861317 01	/02-LIFTING-[B,14]	UNSET	<absent>	1881833 4	/02-LIFTING-[J,3]	UNSET	<absent>
1861619 01	/01-DRIVE-[H,12]	UNSET	<absent>	1881833 5	/02-LIFTING-[O,7]	UNSET	<absent>
1861619 02	/01-DRIVE-[H,11]	UNSET	<absent>	1881833 6	/02-LIFTING-[L,7]	UNSET	<absent>
1862351 01	/03-STEERING-[M,13]	UNSET	<absent>	1882077 1	/03-STEERING-[B,9]	UNSET	<absent>
1862351 02	/03-STEERING-[P,13]	UNSET	<absent>	1882077 2	/03-STEERING-[D,9]	UNSET	<absent>
1862351 03	/03-STEERING-[K,13]	UNSET	<absent>	1882077 3	/03-STEERING-[G,9]	UNSET	<absent>
1862351 04	/03-STEERING-[G,13]	UNSET	<absent>	1882077 4	/03-STEERING-[K,9]	UNSET	<absent>
1862351 05	/03-STEERING-[E,13]	UNSET	<absent>	1882077 5	/03-STEERING-[M,9]	UNSET	<absent>
1862351 06	/03-STEERING-[B,13]	UNSET	<absent>	1882077 6	/03-STEERING-[P,9]	UNSET	<absent>
1863039 01	/01-DRIVE-[N,12]	UNSET	<absent>	1882077 7	/02-LIFTING-[C,14]	UNSET	<absent>
1863039 02	/01-DRIVE-[N,12]	UNSET	<absent>	1882078 1	/02-LIFTING-[C,14]	UNSET	<absent>
1863039 03	/01-DRIVE-[G,12]	UNSET	<absent>	2840106 01	/01-DRIVE-[G,12]/02-LIFTING-[J,6]	UNSET	<absent>
1863039 04	/01-DRIVE-[G,12]	UNSET	<absent>	2840106 02	/01-DRIVE-[N,4]/02-LIFTING-[L,4]	UNSET	<absent>
1863039 05	/01-DRIVE-[G,4]	UNSET	<absent>	2840106 03	/01-DRIVE-[F,4]/02-LIFTING-[J,4]	UNSET	<absent>
1863039 06	/01-DRIVE-[G,4]	UNSET	<absent>	2840106 04	/01-DRIVE-[O,12]/02-LIFTING-[L,6]	UNSET	<absent>
1863039 07	/01-DRIVE-[M,4]	UNSET	<absent>	2840107 01	/02-LIFTING-[D,6]	UNSET	<absent>
1863039 08	/01-DRIVE-[M,4]	UNSET	<absent>	2840107 02	/02-LIFTING-[G,6]	UNSET	<absent>
1864867 01	/02-LIFTING-[B,14]	UNSET	<absent>	2840107 03	/02-LIFTING-[O,6]	UNSET	<absent>
1864910 01	/03-STEERING-[P,10]	UNSET	<absent>	2840107 04	/02-LIFTING-[R,6]	UNSET	<absent>
1864910 02	/03-STEERING-[M,10]	UNSET	<absent>	2840107 05	/02-LIFTING-[O,4]	UNSET	<absent>
1864910 03	/03-STEERING-[K,10]	UNSET	<absent>	2840107 06	/02-LIFTING-[O,4]	UNSET	<absent>
1865085 01	/03-STEERING-[M,8]	UNSET	<absent>	2840107 07	/02-LIFTING-[G,4]	UNSET	<absent>
1865085 02	/03-STEERING-[L,8]	UNSET	<absent>	2840107 08	/02-LIFTING-[D,4]	UNSET	<absent>
1865085 03	/03-STEERING-[O,8]	UNSET	<absent>	108027101 1	/03-STEERING-[B,6]	UNSET	<absent>
1865085 04	/03-STEERING-[O,8]	UNSET	<absent>	108027101 2	/03-STEERING-[A,13]	UNSET	<absent>
1865085 05	/03-STEERING-[R,8]	UNSET	<absent>	108027101 3	/03-STEERING-[P,6]	UNSET	<absent>
1865085 06	/03-STEERING-[R,8]	UNSET	<absent>	108027101 4	/03-STEERING-[O,13]	UNSET	<absent>
1865570 01	/03-STEERING-[G,8]	UNSET	<absent>	108027101 5	/03-STEERING-[D,6]	UNSET	<absent>
1866313 01	/03-STEERING-[R,11]	UNSET	<absent>	108027101 6	/03-STEERING-[D,13]	UNSET	<absent>
1866313 02	/03-STEERING-[R,11]	UNSET	<absent>	108027101 7	/03-STEERING-[F,13]	UNSET	<absent>
1866462 01	/01-DRIVE-[F,4]	UNSET	<absent>	108027101 8	/03-STEERING-[G,6]	UNSET	<absent>
1866462 02	/01-DRIVE-[F,4]	UNSET	<absent>	108027101 9	/03-STEERING-[K,13]	UNSET	<absent>
1866462 03	/01-DRIVE-[O,4]	UNSET	<absent>	108027101 10	/03-STEERING-[K,6]	UNSET	<absent>
1866462 04	/01-DRIVE-[O,12]	UNSET	<absent>	108027101 11	/03-STEERING-[M,13]	UNSET	<absent>
1866462 05	/01-DRIVE-[O,12]	UNSET	<absent>	108027101 12	/03-STEERING-[M,6]	UNSET	<absent>
1866462 06	/01-DRIVE-[O,12]	UNSET	<absent>				
1866462 07	/01-DRIVE-[F,12]	UNSET	<absent>				
1866462 08	/01-DRIVE-[F,12]	UNSET	<absent>				
1866462 09	/02-LIFTING-[G,6]	UNSET	<absent>				
1866462 10	/02-LIFTING-[D,6]	UNSET	<absent>				
1866462 11	/02-LIFTING-[D,4]	UNSET	<absent>				
1866462 12	/02-LIFTING-[G,4]	UNSET	<absent>				
1866462 13	/02-LIFTING-[O,4]	UNSET	<absent>				
1866462 14	/02-LIFTING-[O,6]	UNSET	<absent>				
1866462 15	/02-LIFTING-[R,6]	UNSET	&				